



Part Number: 08K9397

ThinkPad 600X
Quick Reference and Service Information

Your name:

Company name:

Model number:

Serial number:



Company or reseller service:

IBM service Web site:

IBM service number:

Notes:

Locations

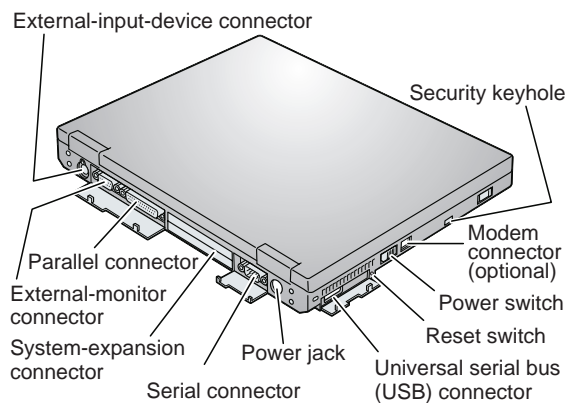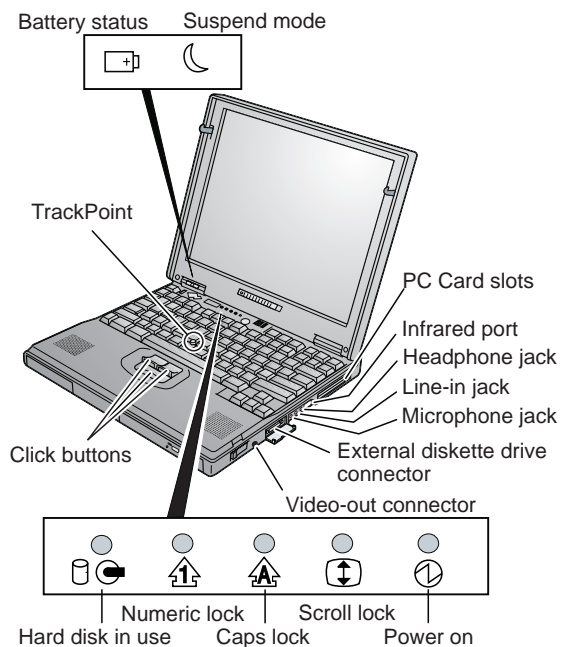

Attaching options

You want to...	You need to...
Swap the device in the UltralimBay	Enter your computer into suspend mode or power off your computer; then swap the device.
Attach the diskette drive externally	Power off your computer; then attach the diskette drive.

Note: For details, see the *User's Reference*.

Function keys

Fn +	Result
F2	Show or hide the window for the battery power status.
F3	Enter standby mode.
F4	Enter suspend mode.
F7	Change the display output location.
F8	Switch the screen size to the full screen mode.
F11	Change the power mode.
F12	Enter hibernation mode.
PgUp	Increase the volume.
PgDn	Decrease the volume.
Back Space	Turn off the sound. Note: To turn on the sound, press Fn + PgUp or Fn + PgDn .

Getting help around the world

International Warranty Service (IWS) is available for customers who are moving products or traveling to countries where their product (as identified by the 4-digit machine type) is sold and serviced by IBM or IBM authorized representatives. Warranty service delivery methods of the servicing country will be in effect. IBM reserves the right to change or modify its service delivery methods by country at any time without notice. Service procedures vary by country, and some service and parts may not be available in all countries because of the laws of that particular country. Some countries have fees that apply where service is provided on-site in remote locations.

To register, call one of the following IWS Offices:

Southeast Asia, Australia, New Zealand,
and Hong Kong: 61-2-9354-4171
Canada, Latin America, and the U.S.: 1-800-497-7426
or
248-740-1215
Europe, Middle East, and Africa: 44-1475-893638
Japan, Korea, China (except Hong Kong),
and Taiwan: 81-462-73-7598

The IWS office will issue an International Warranty Service Certificate, which you can use wherever IBM or IBM resellers sell and service this product.

Before you call for service, have on hand:

- The exact wording of any error messages
- Hardware and software configuration information
- A description of the problem
- Information and serial numbers of any options installed on your system.

ThinkPad Configuration program

You can customize your hardware system settings with the ThinkPad Configuration program. To start the ThinkPad Configuration program, click **Start**, move the cursor to **Settings**, and click **Control Panel**; then double-click the **ThinkPad Configuration** icon.



For more information, click the **Help** button



Battery status

You can monitor the battery status with the Fuel-Gauge program. To start the Fuel-Gauge program, click **Start** and move the cursor to **Programs** and **ThinkPad**; then click **Fuel-Gauge**.

If you are using the secondary battery, you can also see its status with the Fuel-Gauge program.

For further information

You can find the following information in your ThinkPad user's manuals:

User's Reference

- Getting familiar with your computer
- Extending the features of your computer
- Protecting your computer
- Solving computer problems
- Features and specifications

Online User's Guide

- Using your computer outside your home country
- Using audio, modem, and DVD features
- Protecting your computer
- Using your computer with a battery pack
- Using your computer with a PC Card
- Frequently asked questions
- Resolving system resource conflicts
- Installing software
- Using system management
- Using PS2 commands
- Using modem commands
- Hints on using options
- Handling tips and ergonomics information
- Getting service
- Glossary

Note: To start the *Online User's Guide*, click **Start** from the Windows main window, and move the cursor to **Programs** and **ThinkPad 600**; then click *ThinkPad 600 User's Guide*.