



| N°  | Toshiba PN | Description      |
|-----|------------|------------------|
| 1A  | P000248910 | PCB FLCST1       |
| 1A1 | P000230580 | CARDBUS SLOT     |
| 1B  | P000248920 | PCB FLCLE1       |
| 1C  | P000248930 | PCB FLCDD1       |
| 9   | P000218950 | COLOR LCD MODULE |

|                |              |                           |
|----------------|--------------|---------------------------|
| 1-10           | P000245360   | COLOR LCD MODULE          |
| 2-10           | P000241930   | COLOR LCD MODULE          |
| 9A             | P000222240   | FL TUBE                   |
| 9A-1           | P000246400   | FL TUBE                   |
| 10             | P000220160   | FL INVERTER               |
| 11             | P000247670   | HDD UNIT(2.1GB)           |
| 1-11           | P000249530   | HDD UNIT (2.1GB)          |
| 2-11           | P001032      | HDD UNIT (4.3GB)          |
| 3-11           | P001232      | HDD UNIT (6GB)            |
| 4-11           | P001432      | HDD UNIT (10GB)           |
| 5-11           | P001632      | HDD UNIT (20GB)           |
| 6-11           | P001832      | HDD UNIT (30GB)           |
| N/S            | P000250780   | INSULATOR, HDD            |
| 12             | P000230810   | KEYBOARD UNIT             |
| 13             | P000247200   | MEMBRANE SWITCH           |
| 14             | P000231710   | STICK CAP SET             |
| 15             | P000231670   | FDD 3.5 INCH              |
| 16             | P000247730   | CD-ROM DRIVE              |
| 17             | PA2487URN    | MAIN BATTERY PACK         |
| 17-1           | PA2487URJG   | BATTERY PACK (4,000mAh)   |
| 18             | P000220230   | Ni-MH BATTERY             |
| 19             | P000247380   | Ni-MH BATTERY             |
| 19-1           | P000268840   | Ni-MH BATTERY             |
| 20             | P000247210   | SPEAKER                   |
| 21             | P000247750   | 30-10 DC FAN              |
| 22             | PA2440U      | UNIVERSAL AC ADAPTER      |
| 23             | P000182200   | AC CORE SET               |
| 24             | P000247230   | 1MM PITCH CABLE           |
| 25             | P000247240   | 0.5MM PITCH CABLE         |
| 26             | P000247250   | 1MM PITCH CABLE           |
| 30             | P000247260   | BASE ASSEMBLY             |
| 30-1           | P000248780   | BASE ASSEMBLY             |
| 30A            | P000247280   | SWITCH COVER              |
| 30B            | P000247290   | SWITCH BUTTON             |
| 30C            | P000247300   | USB COVER                 |
| 30D            | P000247310   | USB COVER SUPPORT         |
| 30E            | P000247320   | FIR COVER                 |
| 30E-1          | P000249160   | FIR COVER                 |
| 30F            | P000247330   | BATTERY SPRING ASSEMBLY   |
| 30G            | P000232220   | KEY LOCK HOLDER           |
| 30H            | P000247340   | KEY LOCK ASSEMBLY         |
| 30I            | P000247350   | CD-ROM GUIDE ASSEMBLY     |
| 30J            | P000247360   | INSULATOR, SUB BATTERY    |
| 30K            | P000198350   | BOTTOM CUSHION            |
| 30L            | P000247370   | BATTERY COVER ASSEMBLY    |
| 30L-1          | P000249240   | BATTERY COVER ASSEMBLY    |
| 30M            | P000248490   | HDD EARTH PLATE           |
| 30N            | P000248500   | INSULATOR, HDD UPPER      |
| 40             | P000247740   | COVER ASSEMBLY            |
| 40-1           | P000248820   | COVER ASSEMBLY            |
| 40A            | P000247760   | LCD COVER                 |
| 40A-1          | P000249250   | LCD COVER                 |
| 40B            | P000247400   | BRAKE HINGE, LEFT         |
| 40C            | P000247410   | BRAKE HINGE, RIGHT        |
| 40D            | P000247420   | KEYBOARD SUPPORT ASSEMBLY |
| 40E            | P000232460   | LCD LATCH                 |
| 40F            | P000232570   | SPRING, LCD LATCH         |
| 40G            | P000247770   | LCD HARNESS               |
| 40H            | P000247440   | LCD HARNESS               |
| 40I            | P000247840   | CORE HOLDER               |
| 40J            | P000247850   | HINGE COVER, RIGHT        |
| 40K            | P000247450   | LCD SENSOR STICK          |
| 40L            | P000247460   | LENS SP                   |
| 40M            | P000232560   | SPRING, LCD SENSOR        |
| 40N            | P000247470   | SPRING, KEYBOARD EARTH    |
| 40O            | P000232650   | SEAL, SCREW MASK          |
| 40R            | P000247500   | SPRING, HINGE RIGHT       |
| 40S            | P000247510   | EMI GASKET                |
| 40T            | P000232550   | EMI GASKET                |
| 40U            | P000248450   | COVER SUB ASSEMBLY        |
| 40U-1          | P000249170   | COVER SUB ASSEMBLY        |
| 40V            | P000232620   | INSULATOR, LCD COVER      |
| 40W            | P000248970   | LCD GROUND SEAL           |
| 41             | P000247520   | LCD MASK ASSEMBLY         |
| 41-1           | P000248800   | LCD MASK ASSEMBLY         |
| 41A            | P000232690   | LCD CUSHION               |
| 42             | P000247530   | PCMCIA COVER ASSEMBLY     |
| 43             | P000247540   | HDD COVER                 |
| 44             | P000247550   | KEYBOARD HOLDER           |
| 44-1           | P000249180   | KEYBOARD HOLDER           |
| 45             | P000247560   | CD-ROM BRACKET            |
| 46             | P000247570   | FDD BRACKET ASSEMBLY      |
| 47             | P000247580   | SPEAKER HOLDER            |
| 48             | P000247590   | SPEAKER CUSHION           |
| 49             | P000247600   | PCB HOLD BRACKET          |
| 50             | P000247610   | HDD BRACKET               |
| 51             | P000247620   | INSULATOR, MAIN PCB       |
| 52             | P000231960   | SEAL, LCD MASK            |
| 53             | NP315CDT     | PLATE NAME SEAL(M)        |
| 53A            | NP310CDT     | PLATE NAME SEAL(M)        |
| 54             | -            | PLATE NAME SEAL(C)        |
| 55             | P000237930   | TFT EARTH ASSEMBLY        |
| 57             | P000247490   | SPRING HINGE, LEFT        |
| 102            | P000209920   | SCREW M2.5X4Z             |
| 103            | P000247650   | SCREW M2.5X6BZ            |
| 105            | P000227770   | SCREW M2.5X2.6B           |
| 106            | P000244090   | GRIP SCREW M2.5X6C        |
| 107            | P000233430   | SCREW M2.5X6Z             |
| 108            | P000163450   | SCREW M0X4                |
| 109            | P000207940   | SCREW M2X2Z               |
| 110            | P000239090   | SCREW M2.5X7C             |
| 111            | P000239500   | SCREW M2X14C              |
| 112            | P000247680   | SCREW M2.5X25C            |
| 113            | P000230450   | SCREW M2X20Z              |
| <b>OPTIONS</b> |              |                           |
| OP             | KT16508      | KINGSTON 8MB MEMORY       |
| OP             | KT1650/16    | KINGSTON 16MB MEMORY      |
| OP             | KT1500/32    | KINGSTON 32MB MEMORY      |
| OP             | KT1500/48    | KINGSTON 48MB MEMORY      |
| OP             | KT1500/128   | KINGSTON 128MB MEMORY     |
| OP3            | PA2440U      | UNIVERSAL AC ADAPTER      |
| OP4            | PA2487URN    | MAIN BATTERY PACK         |
| OP4-1          | PA2487URJG   | BATTERY PACK (4,000mAh)   |
| OP5            | PA2488U      | BATTERY CHARGER           |
| OP             | XIRC0M-MODEM | XIRC0M MODEM 56T          |
| OPA            | 170-0999-001 | MODEM                     |
| OPA-1          | 150-1078-001 | MODEM                     |
| OPB            | 170-0728-003 | CABLE                     |
| OPB-1          | 305-0138-001 | CABLE                     |